

Trolley De Rozamiento

Modelo: PT-I




PLAIN TROLLEY PT-I SERIES SPECIFICATION

Product Code	Capacity (Ton)	Compatible Rail Size(mm)				Dimensions(mm)							Min. Rotation Radius (mm)	N/W (kg)
		Width(W)		Height(H)		A	B	C	D φ	E φ	F	K		
		Min.	Max.	Min.	Max.									
PT- I 05	0.5	75	125	100	150	206	174	120	45	55	27	-	900	4.2
PT- I 10	1	75	125	125	250	206	231	120	45	80	27	-	1300	7.0
PT- I 20	2	100	150	150	400	241	271	155	60	100	33	-	1500	10.0
PT- I 30	3	100	150	180	400	261	311	185	70	113	47	-	2000	17.0
PT- I 50	5	125	175	250	450	294	351	220	80	125	53	-	2600	29.6
PT- I 100	10	150	175	250	450	294	721	165	-	125	53	-	-	43.5

Adjusting the Trolley for the Rail Size

Load Capacity (t)	Washer Combination Category Corresponding to Rail Width(W) (mm)(See drawings below.)									
	A	B	C	D	E	F	G	H	I	
0.5	75	81.3	87.5	93.8	100	106.3	112.5	118.8	125	
1	75	81.3	87.5	93.8	100	106.3	112.5	118.8	125	
2	100	106.3	112.5	118.8	125	131.3	137.5	143.8	150	
3	100	106.3	112.5	118.8	125	131.3	137.5	143.8	150	
5	125	131.3	137.5	143.8	150	156.3	162.5	168.8	175	
10	150	156.3	162.5	168.8	-	-	-	-	175	

Measure the rail width. Locate the rail width in the row corresponding to the trolley size to find the washer combination category (A to I) for that trolley size. Then refer to the illustration corresponding to the washer combination category for the number of washers and washer placement needed to adjust the trolley size. (See the separate table for 10-ton trolleys.)

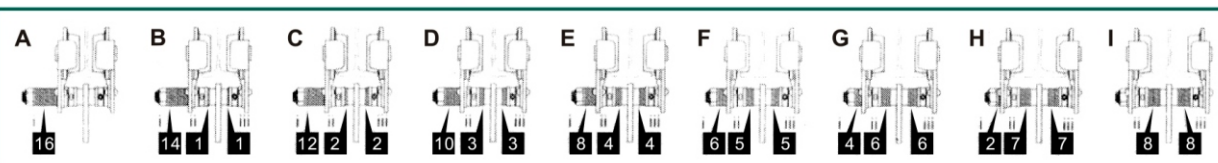

Washer combinations for 10-ton trolleys.			
	i	ii	iii
A	8	0	0
B	6	1	1
C	4	2	2
D	2	3	3
I	0	4	4

